



DOOR ALARM™

Fits on any door to scare away intruders!

Agnes 6 and up

10535

SpyX Door Alarm

Requires Two AAA (LR03) batteries, not included.

Important: Please save this instruction sheet. It contains valuable product information.

TO OPERATE THE SPYX DOOR ALARM- Motion Detector

1. Attach the Door Alarm over the door knob of your door.
2. Turn the Alarm to the ON position (Fig. 1). The red LED will flash and after 3 seconds the Alarm is set and ready to go!
3. You can test the Alarm by twisting the door knob or by moving the Alarm back & forth a few times. The Alarm will sound through the speaker. After the Alarm sounds it will reset automatically.
4. Turn the Door Alarm off when not using it to make the batteries last longer

USING THE FLEXIBLE CABLE

When not in use, the flexible cable can wrap around the Alarm in storage mode (Fig. 3) or you can detach one end of the cable to wrap around door knobs, backpack loops or anything you want to protect. Slide the end of the flexible cable back into any one of the open slots on the Alarm body and then switch the Door Alarm to the ON position to set it.

Note that you can use the SpyX Door Alarm on any movable surface and if it detects motion the alarm will sound.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type are recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS:

TO INSTALL AND REPLACE BATTERIES (Fig. 2)

1. Requires 2 AAA (LR03) batteries, not included.
2. Use a small Phillips screwdriver to loosen the screw and remove battery compartment cover.
- NOTE: Screws will not detach from battery compartment cover.**
3. Place batteries in the compartment as shown.
4. Replace battery compartment cover and tighten screws.

Fig 1.



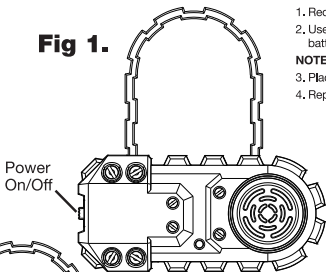 


Fig 2.

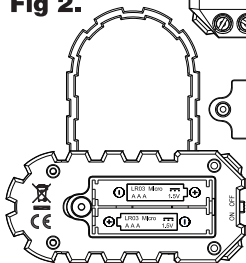 


Flexible Cable

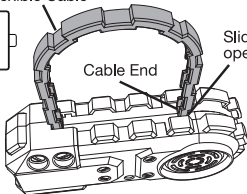 

Slide into open slot

Fig 3.

 Cable Storage Mode

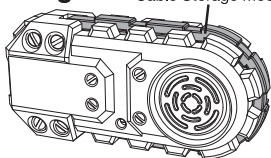

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: •Reorient or relocate the receiving antenna. •Increase the separation between the equipment and receiver. •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING:

Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT

www.atomicmonkeyproducts.com/help

Product specifications subject to change.
SPYX Door Alarm 10535-IS-US R3