






Micro Gear set™ UTILITY BELT WITH 4 SPY TOOLS

**Important: Please save this instruction sheet.
It contains valuable product information.**

TO USE THE UTILITY BELT

1. Remove the belt from the packaging.
2. Slide the belt through the slot on the rear of each tool holder. Make sure that each holder is pointed in the same direction.
Hint: The Micro Gear Set tools clip on and off the belt holders. The name of the tool and the direction it fits is shown on each holder.
3. Push the loose end of the belt up and then down through the buckle (Fig. 2).
4. Press down on both sides of the buckle to unclip the belt (Fig. 1).
5. Wrap the belt around your waist or shoulder, keeping the Micro Gear Set tools in easy reach.
6. Adjust fit by pulling the loose end of the belt through the buckle (Fig. 2).

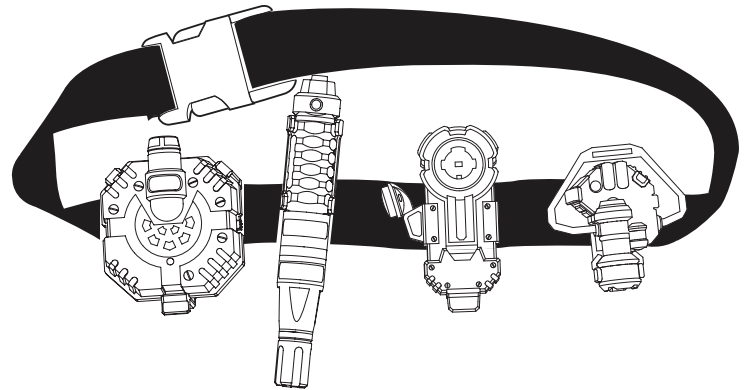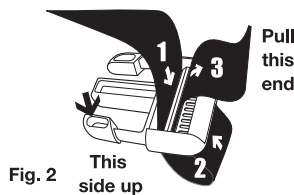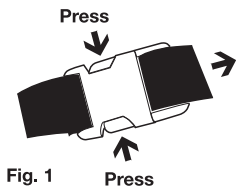

How to play with your SpyX Micro Listener

- 1) Unclip the Earbud and unwrap the cord
 - 2) Move the on/off switch to on (Fig 3)
 - 3) Gently place the ear bud into your ear
 - 4) Clip your Micro Listener to the inside of your pocket so the Sound Dish is pointing outwards. (Fig 4)
- Tip: When you are done playing make sure you turn off the SpyX Micro Listener

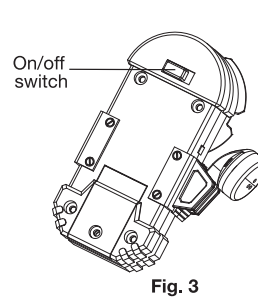


Fig. 3

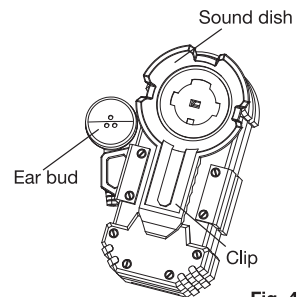


Fig. 4

TO OPERATE The MOTION ALARM- Motion Detector

Place Motion Alarm near a place where you think people may walk, like a door or a hallway.

- The alarm works best in bright light.
- Turn on the alarm to position #M (Motion Detector). The red LED will flash after 3 seconds to show that the alarm is ready to go!
- If alarm does not sound, it could be because it needs a bit more light in the room. Test the alarm by moving your hand in front of the beam.
- The alarm will sound for 2 to 3 seconds show you that the alarm is set.
- After turning the alarm on, the alarm will reset automatically.
- Turn alarm off when not using to make the batteries last longer.

TO OPERATE The MOTION ALARM- Vibration Detector

Place Motion Alarm in or on anything that you want to protect (example: a book or backpack)

- The alarm works in any light conditions.
 - Turn on the alarm to position #V (Vibration Detector). The red LED will flash after 3 seconds to show that the alarm is ready to go!
- Test the alarm by picking up or moving the object that the alarm sits on
- The alarm will sound for 2 to 3 seconds show you that the alarm is set.
 - After turning the alarm on, the alarm will reset automatically.
 - Turn alarm off when not using to make the batteries last longer


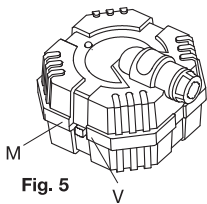


Fig. 5

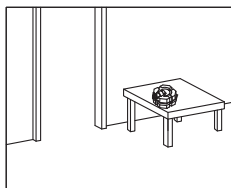

HOW TO USE YOUR MICRO SPY LIGHT (Fig. 8)

1. Adults: Be sure fresh BATTERIES are installed (see below)
2. The **EAR CLIP** adjusts to fit over either ear. Flip it to the side you desire, and then fit the clip over your ear.
3. Press the switch to turn it **ON**. The stealthy orange **BEAM** makes it easy for you to see, but hard for others to spot you!
4. Press the switch again to turn your Micro Ear Light OFF when done playing.

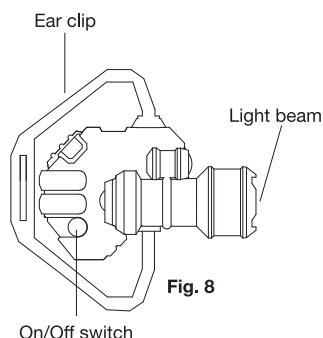


Fig. 8

How to play with your SpyX Invisible Ink Pen (Fig 6)

1. Remove **PEN CAP**.
 2. Write your invisible message on a piece of paper.
 3. You can write messages on any paper, including small pieces of paper that you can hide and transport inside the **SECRET STORAGE** (see below).
 4. Hide your message in a secret location, or pass it to a friend to decode.
 5. To decode the message, press and hold the **LIGHT SWITCH**. Shine the **DECODER LIGHT** at the message. The invisible message will be revealed.
 6. Always replace pen cap when finished writing.
- Note:** If the cap is left off and the **PEN TIP** dries out, press the tip to a damp cloth or sponge to moisten it.
- Tip:** Use the SpyX Invisible Ink Pen to mark your stuff and make sure you can always identify what's really yours!

TO UNLOCK THE SECRET STORAGE (Fig 7)

1. Unscrew the top half of the SpyX Invisible Ink pen counterclockwise until the top and bottom compartments separate.
2. The secret storage can be used to hide and store messages, extra paper, or other small items.
3. One roll of paper is included. Make refills by using your own paper.

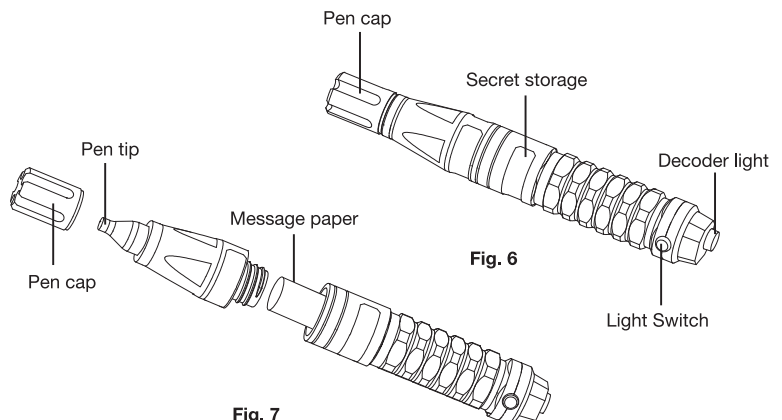


Fig. 6

Fig. 7

TAKE CARE OF YOUR MICRO GEAR SET TOOLS

- Avoid dropping, bumping or smashing your tools.
- Do not immerse them in water or get them wet.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended are to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS: TO REPLACE BATTERIES

The **MOTION ALARM** (Fig. 9) requires two AAA (LR03) batteries, not included.

The **SpyX Invisible Ink Pen** (Fig. 10) requires three 386 (LR43) button-cell batteries, included.

The **SpyX Micro Listener** (Fig. 11) requires one 357 (LR44) button-cell battery, included.

The **MICRO SPY LIGHT** (Fig. 12) requires two 357 (LR44) button-cell batteries, included.

1. Locate the battery compartment on the rear of each Micro Gear Set tool. Use a small Phillips head screwdriver to loosen the screw, and remove the battery cover.

Note: The screw will not detach from the battery cover.

2. Remove exhausted batteries.

3. Place new batteries in compartment as shown (Figs. 9, 10, 11, & 12).

4. Replace battery cover and tighten screw.

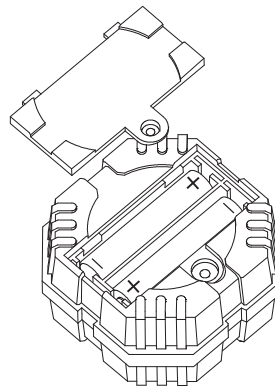


Fig. 9

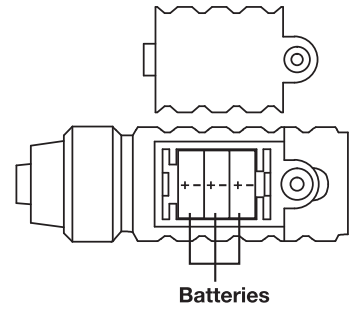


Fig. 10

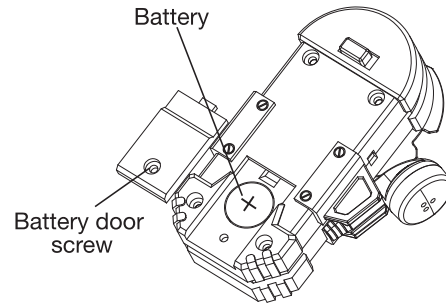


Fig. 11

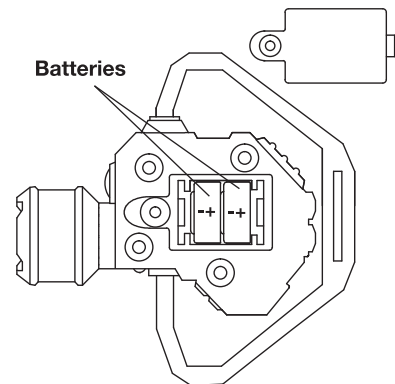


Fig. 12

⚠ WARNING:
CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.

Warning: Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Secret Agent Pen contains UV light.
Do not stare directly into beam.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Product specifications subject to change.
MICRO GEAR SET 10151-IS-US



IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
www.atomicmonkeyproducts.com/help