



SPY PEN TOOL KIT

Ages 6 & up
10545

Requires two AAA (LR03)
batteries, not included.

Important: Please save this instruction sheet.
It contains valuable product information.

ADULTS: INSTALLING BATTERIES

1. Use a small Phillips head screwdriver to loosen the screw and remove the battery door cover on pen (Fig. 2).
2. Grip barrel and rubber grip and unscrew to open battery compartment (Fig. 2A).
3. If changing batteries, remove both old batteries and discard.
4. Insert two "AAA" (LR03) batteries, following the polarity markings in the battery compartment. (Fig. 3) **IMPORTANT:** Observe battery polarity (direction,+ and-)
5. Replace the end of the pen by screwing back into place, replace battery door and tighten screw.








MOTION ALARM

To attach motion alarm, remove **REAR PEN CAP** by pulling to expose **POWER JACK**. (Fig. 4) Plug on the motion alarm and you are ready to catch anything or anyone that crosses your path! (Fig. 5)

1. Place motion alarm next to a door, hallway or window with invisible beam pointing across opening. (Fig. 6)
2. Pull out grooved ring around alarm lens to narrow its field and make it less sensitive to movement. Push in to widen its field and make it more sensitive.
3. Make sure that nothing is blocking the motion alarm lens. The alarm will best detect movement five feet directly in front of the lens.
4. Direct sunlight may set off the alarm. Don't face it into very bright light. Also, pulling out grooved ring will reduce its sensitivity to light.
5. When you plug in the motion alarm, red LED will flash after 3 seconds to indicate the alarm is set. Test your alarm to make sure it works by moving your hand in front of invisible beam. This will set off alarm for 2 to 3 seconds and indicate it is set and ready.
6. The alarm will sound for 2 to 3 seconds when it detects motion. The alarm is still armed and will sound again if beam is crossed again.
7. Turn off motion alarm by unplugging from the pen to preserve battery life. Make sure to unplug motion alarm when not in use.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

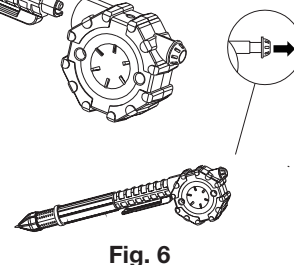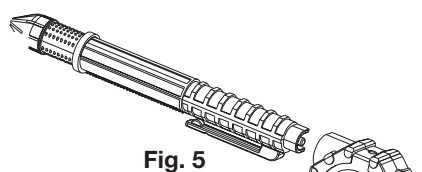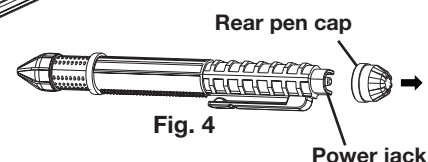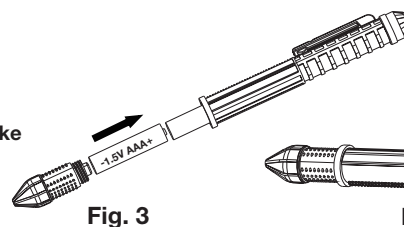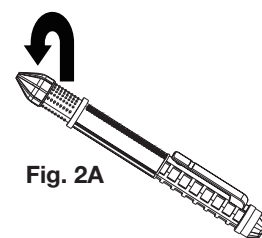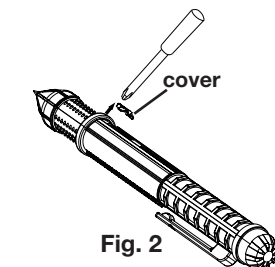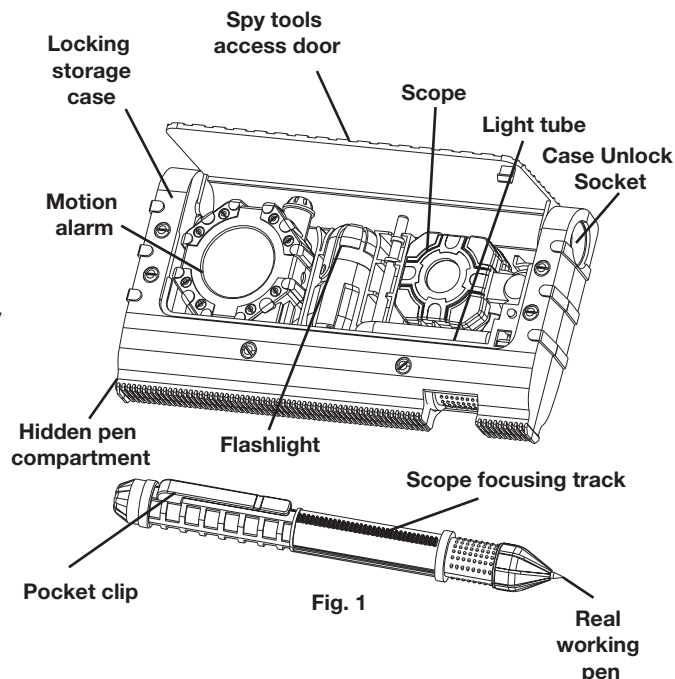

Product specifications subject to change.
SPY PEN TOOL KIT 10545-IS-US



IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT
www.atomicmonkeyproducts.com/help



WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

FLASHLIGHT

1. To attach LIGHT, remove the rear pen cap by pulling to expose power jack.

(Fig. 7) Plug on light and it will turn on. (Fig. 8)

2. Turn off light by disconnecting from pen to preserve battery life.

LIGHT TUBE

If you need to write in the dark, you can plug the light tube into the flashlight. The light tube bends light and points it toward the writing end of the pen.

3. Place end of LIGHT TUBE into light as shown. (Fig. 9) Note that TAB on the light tube must be placed between the GROOVES of the Light. Turn slightly to lock light pipe in place.
4. When writing, hold pen so light tube is on top of pen and your hand does not block the light. (Fig. 10)

SCOPE

1. Use the Scope to see far away or magnify things up close. Remove rear pen cap by pulling. (Fig. 7) Plug on the EYEPIECE in its place. (Fig. 11)
2. Snap the OBJECTIVE LENS onto barrel of pen, making sure the TRACK GEAR and the SMALL GEAR meet. (Fig. 12)
3. Look through eyepiece and adjust focus by turning small KNOB on objective lens.
4. To magnify objects and see up close, use only objective lens by holding it in your hand. (Fig. 13)

LOCKING STORAGE CASE

The pen slides into the hidden compartment of the storage case for safekeeping.

1. Slide pen into case, tip first, until it clicks into place. Note orientation of POCKET CLIP. (Fig. 14)
2. To remove pen from the storage case, locate the opening in the front of the case. Place finger or thumb on soft grip of pen and Slide out as shown in (Fig. 15). Grip end of pen and remove from case.
3. To open case to access your agent tools, place rear pen cap into LOCK SOCKET and turn to your right. (Fig. 16) DOOR latch will release and you can lift the door open.
4. If you accidentally lock rear pen cap in case, don't worry. Look closely in the end of the socket and you will see a slot. Use a small standard screwdriver to open. Twist to your right. (Fig. 16A)

PEN- With Disappearing ink

To write with your pen, grip the pen and turn tip to your left. To retract the pen point, grip pen and turn to your right. (Fig. 17)






The Pen also has special Ink that will disappear when you erase the message with the rubber tip of the Pen. AND it will slowly reappear when the message paper is placed in your refrigerator's Freezer compartment at the COLDEST setting

ADULTS: REPLACING INK CARTRIDGE










1. Pen requires a special-length ink cartridge. To change cartridge. grip PEN TIP and pull off. This will expose INK CARTRIDGEHOLDER. (Fig. 18)
2. Remove holder by unscrewing from TIP. (Fig. 19)
3. Hold ink CARTRIDGE and holder firmly and pull cartridge from holder. (Fig. 20)
4. Insert new cartridge (included) into holder and push in till it stops. Screw holder into tip and snap tip back onto pen.

⚠ WARNING:

Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

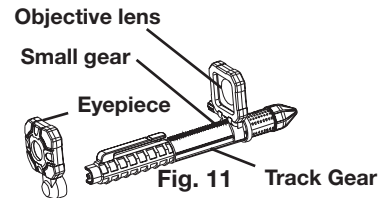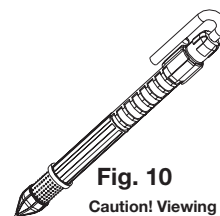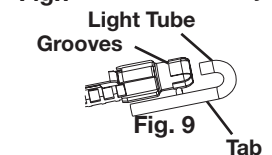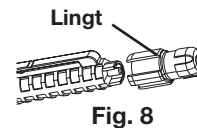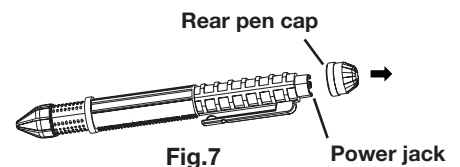

Caution! Viewing the sun can cause permanent eye damage.
Do not view the sun with spy scope or even the naked eye.

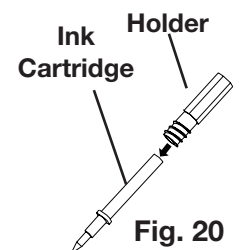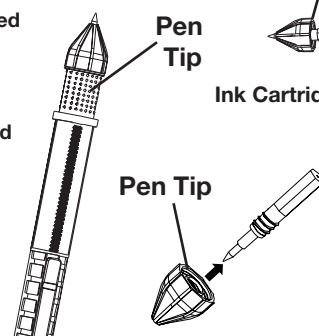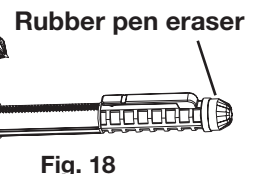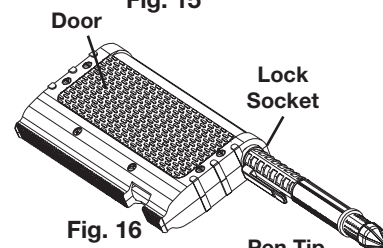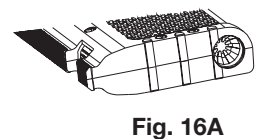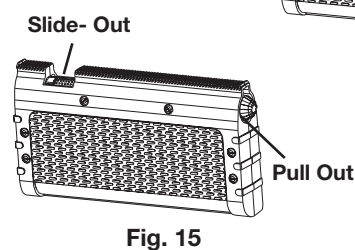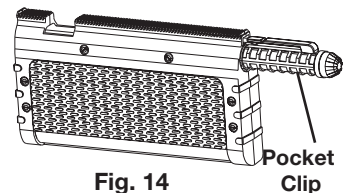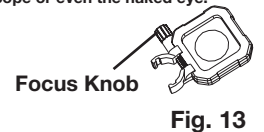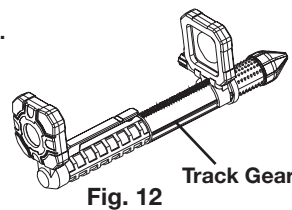

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.